



Yealink T33G

User Guide

Table of Contents

Dialing	2	Change Ringtone	6
Dial phone number or extension	2	Access Voice Messages	6
Your Phone Calling Features	2	Call Forwarding	6
Basics	2	Activate Call Forwarding	6
Change Views	2	Deactivate Call Forwarding	6
End Calls	2	Call Waiting	7
Hold Calls	2	Activate Call Waiting for All Calls	7
Transfer Calls	2	Deactivate Call Waiting for All Calls	7
Transfer Call Direct to Voicemail	2	Cancel Call Waiting for a Single Call	7
Conference Calls	3	Speed Dial 8 (1-digit codes)	7
Forward Calls	3	Set Up/Update Speed Dial 8 (1-Digit Codes)	7
Intercom	3	Place Call Using Speed Dial 8	7
Do Not Disturb	3	Speed Dial 100 (If Enabled)	7
Menu	3	Set Up/Update Speed Dial 100 (2-Digit Codes)	7
Redial	3	Place Call Using Speed Dial 100	7
Park and Unpark Calls (If Enabled)	4	Initial Voicemail Set Up	8
Broadcast Paging and Intercom Features	4	Access Voicemail and Voice Portal	8
Broadcast Paging	4	From Your Own Phone	8
Intercom	4	From Another Phone Within Your Group	8
Viewing Recent Calls	4	From a Phone Outside of Your Group	8
View Recent Calls List	4	Voice Messaging Main Menu	9
Directory	4	“Play Message” options	9
View Organization Directory	4	Voice Portal Main Menu	9
Busy Lamp Field (BLF)	4		
View Phone Status	4		
Speed Dial	4		
Intercept Call Ringing to BLF	4		
Transfer Call to BLF	4		
Speed Dial Keys	5		
Line Appearances	5		
Additional Phone Features	6		
Muting the Microphone	6		
Change Volume	6		

Dialing

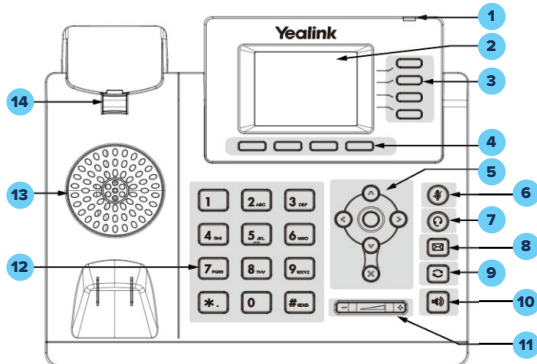
Dial phone number or extension







Lift your handset and dial the phone number, (OR, with handset on-hook, dial number and press **Call**). For:

- **Local and Long distance** – dial the 10-digit phone number (area code + local number)
- **International** – dial 011 + country code + city code + number
- **Internal extension** – dial the extension

NOTE:

- Be sure to use a surge protector with your phone.



- | | |
|--|--------------------|
| 1. Power LED Indicator | 12. Keypad Keys |
| 2. Phone screen | 13. Speaker |
| 3. Line Keys | 14. Reversible Tab |
| 4. Soft Keys | |
| 5. Navigation Keys | |
| OK Key | |
| Cancel Key | |
| 6. Mute Key  | |
| 7. Headset Key  | |
| 8. Message Key  | |
| 9. Redial Key  | |
| 10. Speakerphone Key  | |
| 11. Volume Key  | |



Your Phone Calling Features

Basics

Change Views

- To answer a ringing call, pick up the handset or press the **Answer** softkey to put call on speakerphone
- To answer a second call while on an active call, simply press the blinking line key. The first call will automatically be placed on hold. Toggle back and forth between multiple calls by pressing the corresponding line key.

End Calls

- Press  to end an active call, replace the handset, or press . Or, press **.. > End Call**
- For multiple calls, press **.. > End Call** to hang up active call and then press corresponding line key to resume held call

Hold Calls

- While on an active call, press **.. > Hold** and the call will be held. Press **.. > Resume** to resume the call

NOTE:

- You can also press the blinking line key to resume the call.

Transfer Calls

Attended Transfer

1. Press **Trans**, then dial the other party and press **Call**. Active call is held
2. When you hear the ring back sound, or after you talk with the other party, press **Trans** again

Blind Transfer

1. Press **Trans**, dial the other party and then press **B Trans**

Transfer Call Direct to Voicemail

1. During an active call, press **VM Transfer line** key
2. Enter the extension number and press **OK**

Conference Calls

Conduct Conference Calls

1. Make call to or receive call from other party
2. Press **Conf** softkey
3. Dial the third party and press **Call** (or **#**)
4. Wait for third party to answer then press **Conf**
5. Press **Split** to remove a party from the conference

Forward Calls

NOTE:

- Please see Quick Dial section of this guide for additional Call Forwarding options and methods.

To enable call forwarding always (first time setup)

1. Press **Forward**, then enter the forwarding number or extension
2. Press the up navigation arrow to select the **Always Forward** option
3. Press **Switch** to enable forwarding
4. Press **Save**

NOTE:

- The next time you press forward it will automatically forward to the last number specified.

To modify an existing forwarding number, press **Menu**, navigate to **Features, OK > Call Control > Call Forward > Always Forward**. Press down arrow to select the forwarded number. Modify number as required and then press **Save**. Lift handset to clear screen.

Disable Call Forwarding Always

1. Press **Forward**

Call Forwarding No Answer

1. Press **Menu**, navigate to **Features, OK > Call Control > Call Forward > No Answer Forward**
2. Select options to enable, enter number and specify number of rings. Modify number as required and then press **Save**. Lift handset to clear screen.

Call Forwarding Busy

1. Press **Menu**, navigate to **Features, OK > Call Control > Call Forward > select Busy Forward**
2. Select options for enabled, navigate down and enter the forward to number. Modify number as required and then press **Save**. Lift handset to clear screen.

Intercom

- To connect directly to the speakerphone of a co-worker, press **Interco**, dial the extension followed by **#** (or press **Call**)

NOTE:

- If you are receiving an intercom call, the phone beeps, then the caller automatically connects to your speakerphone

Do Not Disturb

- To disable ringing, press **DND**. The LCD display will show a **DND** icon and any incoming calls will be directed to voicemail
- Press **DND** again to re-enable ringing

Menu

- The **Menu** softkey provides access to multiple options. Use the navigation keys to highlight desired option and press **Enter** softkey or **OK**

Redial

- To redial the last call placed, press **Redial Key > Call**, or press the **Redial Key**  twice.

NOTE:

- You can also use the down navigation key to select a number from a list to redial.

Park and Unpark Calls (If Enabled)

Parking is a way to place a call on public hold so that others can unpark and answer the call from any phone.

Park an Active Call

1. Press **GPark**
2. Listen to the message which identifies the extension the call is parked to
3. Notify the intended recipient(s) that a call is parked at specified extension. This can be done via intercom or broadcast paging

NOTE:

- If configured, simply press an available park line key (near upper right of phone) to park an active call

Unpark a Call

1. Recipient presses corresponding blinking **Unpark** line key and parked call is retrieved

NOTE:

- Another option is to press the **Cancel Key (X)** below the navigation buttons and then enter the parked extension.

Broadcast Paging and Intercom Features

Broadcast Paging

- To page all phones on your local network (LAN), press the **Paging** line key and begin talking. All phones that are not on active calls will be alerted of the page with an audible beep and then receive the page via speakerphone.

Intercom

- To connect directly to the speakerphone of one co-worker, press **Interco**, dial the extension followed by # (or press **Call**)

NOTE:

- If you are receiving an intercom call, the phone beeps, then the caller automatically connects to your speakerphone.

Viewing Recent Calls

View Recent Calls List

1. Press the down navigation arrow
2. Scroll down/up to view all calls
3. Then press right arrow for multiple options to view respective missed, placed and received call lists
4. Press **Call** to dial the highlighted call

Directory

View Organization Directory

1. Press the up navigation arrow (**All Contacts** option will be highlighted)
2. Press **OK** navigation button or **Enter** to view contacts
3. Scroll down/up to view contact list and highlight desired contact
4. Press **Call** > **Call** to dial the contact

Busy Lamp Field (BLF)

Monitored Lines (BLF Keys) are part of an optional add-on, and are managed by your phone system administrator. Up to 8 BLFs can be configured on phone display (pages 2, 3 & 4).

View Phone Status

1. Press the 4th line key near lower right of graphical display
2. This will show up to three pages of other users/phones
3. Green indicates other person's phone is idle. Red indicates other person is on a call

Speed Dial

1. Simply press the BLF to place a call to that phone

Intercept Call Ringing to BLF

1. While BLF is blinking on an incoming call, simply press BLF key to intercept or pickup that call

Transfer Call to BLF

1. While on an active call, press **Trans**
2. Press 4th line key to search for BLF
3. Press desired BLF and call will be transferred

Speed Dial Keys

Any unused line keys can be setup as speed dials.

Create Speed Dial (or Remove)

1. Press the 4th line key near lower right of graphical display and then locate an unused line key
2. Press and hold the unused line key
3. Change the *Type* to *Speed Dial* by pressing the right navigation arrow
4. Select the *Value* field, enter desired phone number and then press *Save*
5. The newly created speed dial will display the number. Add a *Label* to display a name instead of number
6. Change *Type* to *N/A* to remove the speed dial

Use Speed Dial Key

1. Locate desired speed dial key and press it. This will place an outbound call to the specified number

Line Appearances

- Line Appearance Keys (2 standard) can independently handle live calls. With this optional add-on, additional appearance keys can be configured or shared lines from other phones added. These are managed by your phone system administrator.

Important Note About 911:

Because VoIP (Voice over Internet Protocol) service works differently than traditional phone service, VoIP E911 service may also work differently. To understand limitations and to be prepared should you need to make a 911 call from your IP phone, please read the TelNet E911 Emergency Service Advisory Notification at:

➔ www.telnetww.com/TelNet911Advisory.pdf

VoIP 911 Alert

Emergency 911 service on this device may be limited or unavailable and DOES NOT function during a power or broadband outage.



➔ Click to visit www.telnetww.com/911info

Additional Phone Features

Muting the Microphone

- During a call, press  to mute your audio
- To disable Mute, press  again

Change Volume


- To change call volume, press  during a call
- To change the ringer volume, press  when the phone is idle or ringing

Change Ringtone

Change the Incoming Call Ringtone

1. Press **Menu** softkey
2. Navigate to **Basic**
3. Navigate to **Sound**
4. Select **Ring Tones**
5. Select **Common** and press **OK**
6. Highlighted ringtone will automatically play
7. Navigate up/down to select the desired ringtone
8. Press **OK**

Access Voice Messages

1. Press the voicemail button  followed by **Connect**
2. Follow prompts to play messages, record greetings, etc. (See Voice Messaging section for more options)

Quick Dial Calling Features

Call Forwarding

Forward all incoming calls to another number or voicemail, forward calls only when your line is busy, or when calls go unanswered. As part of your business continuity plan, have Call Forwarding Not Reachable feature set to automatically forward all calls if something prevents calls from completing, (e.g. power failure or loss of Internet connectivity).

Activate Call Forwarding

1. Lift handset. Press the * code (noted below)
2. Enter phone number to which calls will be forwarded, or forward to Voicemail
3. Press # and replace handset to activate service

Deactivate Call Forwarding

1. Lift handset. Press the * or # code (below)
2. Replace handset to deactivate service

Call Forwarding	Activate	Deactivate
All Calls	*72	*73
All Calls to Voicemail	*21	#21
*When Busy	*90	*91
*Busy to Voicemail	*40	#40
When No Answer to Voicemail	*41	#41
Not Reachable (for business continuity plan – requires set up)	*94	*95

NOTE:

- Call forwarding options marked with * require call waiting to be disabled to function properly.

Call Waiting

Be notified of other calls coming in while you are on the line.

Activate Call Waiting for All Calls

1. Lift handset. Press ***43**, and then press **#**
2. The Call Waiting service is turned on for all calls

Deactivate Call Waiting for All Calls

1. Lift handset. Press **#43**, and then press **#**
2. The Call Waiting service is turned off for all calls

Cancel Call Waiting for a Single Call

1. Lift handset. Press ***70**, and then press **#**
2. The Call Waiting service is turned off so that you can make an uninterrupted phone call. The Call Waiting service will be back on for the next phone call

Speed Dial 8 (1-digit codes)

Set up and update 1-digit speed dial codes for frequently dialed numbers

Set Up/Update Speed Dial 8 (1-Digit Codes)

1. Dial ***74**, and listen for tone
2. Enter the 1-digit code plus the 10-digit phone number you would like assigned followed by **#**. (Recorded message confirms code was programmed)

Place Call Using Speed Dial 8

1. Press the 1-digit **speed dial code**, then press **Call**

Speed Dial 100 (If Enabled)

Set up and update 2-digit speed dial codes for frequently dialed numbers.

Set Up/Update Speed Dial 100 (2-Digit Codes)

1. Dial ***75**, press **#** and listen for tone
2. Enter the 2-digit code plus the 10-digit phone number you would like assigned followed by **#**. (Recorded message confirms code was programmed)

Place Call Using Speed Dial 100


1. Press **#** plus the 2-digit speed dial code, then press **Call**

Quick Dial Guide

	<i>On</i>	<i>Off</i>
Call Forward		
All Calls	Forward or *72	Forward or *73
All Calls to Voicemail	*21	#21
When Busy	*90	*91
Busy to Voicemail	*40	#40
When No Answer to Voicemail	*41	#41
Not Reachable (for business continuity plan – requires set up)	*94	*95
Check Not Reachable Status	*63*	
Call Waiting	*43	#43
Cancel for single call		*70
Call Return (last inbound number)	*69	
Directed Call Pickup (intercept)	*97	
Redial (last outbound number)	*66	or Redial
Access Voicemail	*86	or MESSAGE
Transfer Call	Transfer	
Call Hold	Hold	Resume
Do Not Disturb	DND or *78	DND or *79
Three-way Call	Conference	(repeat to add)
Speakerphone	Speaker	(again for off)
Mute	Mute	(again for off)
Music On Hold Deactivation (per-call deactivation)	*60	(music returns next call)
Clear Message Waiting Indicator	*99	
Change Number of Rings before voicemail picks up	*610	


Accessing Voicemail and Your Voice Portal

Access your voicemail and personal voice portal using your own phone:

- Press  followed by **Connect**
- Or dial ***86** and **Call** from your phone

Your administrator provides you with the phone number/extension for the group Voice Portal (referred to as the Voice Portal general access number/extension)

Initial Voicemail Set Up


1. First time logging in, press  & **Connect** and then:
2. Enter a new passcode at the prompt, followed by **#**
3. Re-enter your passcode at the prompt followed by **#**
4. Record your name at the prompt and press **#**. Your Voicemail is setup and ready for use.

NOTE:

- Your voicemail passcode must be 6 digits in length and cannot be your phone number. Do not use weak passcodes (e.g., not sequential or repeating digits).

Access Voicemail and Voice Portal

From Your Own Phone

1. First time logging in, press  & **Connect**
2. Enter your passcode followed by **#**. (Skip step if auto login is enabled)
3. Follow prompts of the **Voice Messaging Main Menu**

From Another Phone Within Your Group

1. Dial your phone number or extension
2. Press ***** while greeting plays to reach the login prompt
3. Enter your passcode followed by **#** to reach **Voice Messaging** main menu
4. At the **Voice Messaging** menu, make selection, (or press ***** to reach the **Voice Portal** main menu)

From a Phone Outside of Your Group

1. Dial the Voice Portal general access phone number/extension
2. Enter your mailbox number (typically your phone number)
3. Enter your passcode followed by **#**
4. Follow prompts of the **Voice Portal Main Menu**

Voice Messaging Main Menu

1	Listen to Messages
2	Busy Greeting Menu
3	No Answer Greeting Menu
4	Extended Away Greeting Menu
5	Compose Message Menu
7	Delete All Messages
8	Message Deposit Settings Menu
*	Voice Portal Main Menu
#	Repeat Menu

“Play Message” options

While listening to message		Between messages	
1	Skip Back	#	Save
2	Pause/Resume	7	Delete
3	Skip Forward	2	Repeat
4	Jump to Beginning	5	Envelope Info
6	Jump to End	6	Play Next Message
Any time		8	Callback Caller
*	Return to Previous Menu	9	Additional Options 1 Reply to Message 2 Forward Message * Return to Previous Menu # Repeat

Voice Portal Main Menu

1	Access Voice Mailbox
3	Greetings Menu – Record Name
5	Change Passcode
6	Exit
#	Repeat